

Bobtot

Portable Speaker With Microphone


User Manual

Model No: ET29

Safety Instructions

1. Avoid dropping.
2. Do not disassemble.
3. Avoid extreme temperatures.
4. Use original or certified cables.
5. Do not use any corrosive cleaner/oil to clean.
6. Do not use the device outdoors during thunderstorms.
7. Do not expose batteries to high heat as direct sun light, fire and Etc.


What's in the box

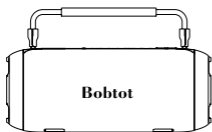

ET29 Portable Party Speaker



Wireless Microphone

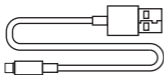

USB Type-C Charging Cable




3.5mm AUX Audio Cable



Quick Start Guide

Buttons Overview

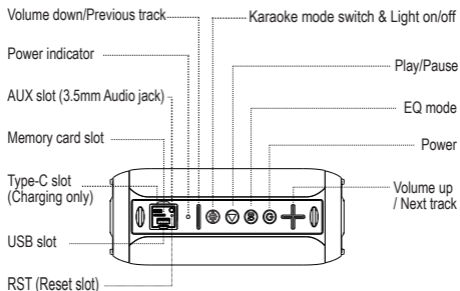


Button Function

Button	Function	Operation
⏻	Power on/off	Long press
	BT/AUX/USB/Memory card switch mode	Short press
+	Increase the volume	Short press
	Next track	Long press
-	Decrease the volume	Short press
	Previous track	Long press
▶	Play/Pause	Short press
	Disconnect BT	Long press
EQ	Indoor /Outdoor mode	Short press
🔊	KTV mode(Medium ECHO) Karaoke mode (Much ECHO) Vocal mode (No ECHO)	Short press
	Light on/off	Double click

How to use the speaker

Wireless Pairing

1. Short press  until you hear prompt sound, which means that speaker enters BT pairing mode.
2. Find " **Bobtot ET29** " speaker on the BT list of your phone or tablet, and click to connect.
3. It's successfully connected to your smart device if you hear prompt sound.


AUX/USB/Memory card mode

Plug 3.5mm audio cable & USB flash drive & memory card to the speaker and your audio source device. It will automatically play and make sure other source are disconnected.

Charging (USB Type-C)

1. When the battery is low, you will hear the prompt sound " low battery " , then please charge it.
2. Plug the USB cable to adapter (or computer's USB port) and Type-C insert to the speaker to charge the speaker, the red indicator light will be on when charging, the indicator light will be off when fully charged.

How to use the Microphone

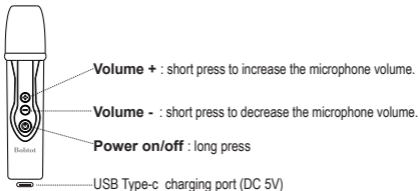

NOTE:

When you use the Microphone, short press "  " button on speaker to choose the ECHO effect :

if you need much ECHO, pls choose Karaoke mode.

if you need medium ECHO, pls choose KTV mode.

if you don't need the ECHO, pls choose Vocal mode.

Specifications

BT version	5.3
Range	33ft/10m
Audio output	60W
Play time (varies by volume level and content)	Up to 20 hours
Charging time	4 - 6 hours
Battery	7.4 V/ 4400 mAh
Microphone Battery	3.7 V/ 1200 mAh
Waterproof rating	IPX7
Input	DC 5V
Driver (full range)	2 x 3"
Impedance	4Ω
Frequency response	60 Hz-18 KHz
Size	250x104x104mm/9.8x4.09 x4.09 in
Weight	≈ 1630g/3.59 lb

Reset Your Device

If the speaker does not work properly, you may reset it by inserting needle to Reset hole for approximately 1 second until the speaker powers off, and then powers on again.

FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Bobtot

18 Months Warranty

Life-time & Timely Technical Support

 **support@bobtot.net**

 **www.bobtot.net**

Made in China

FC RoHS C E

